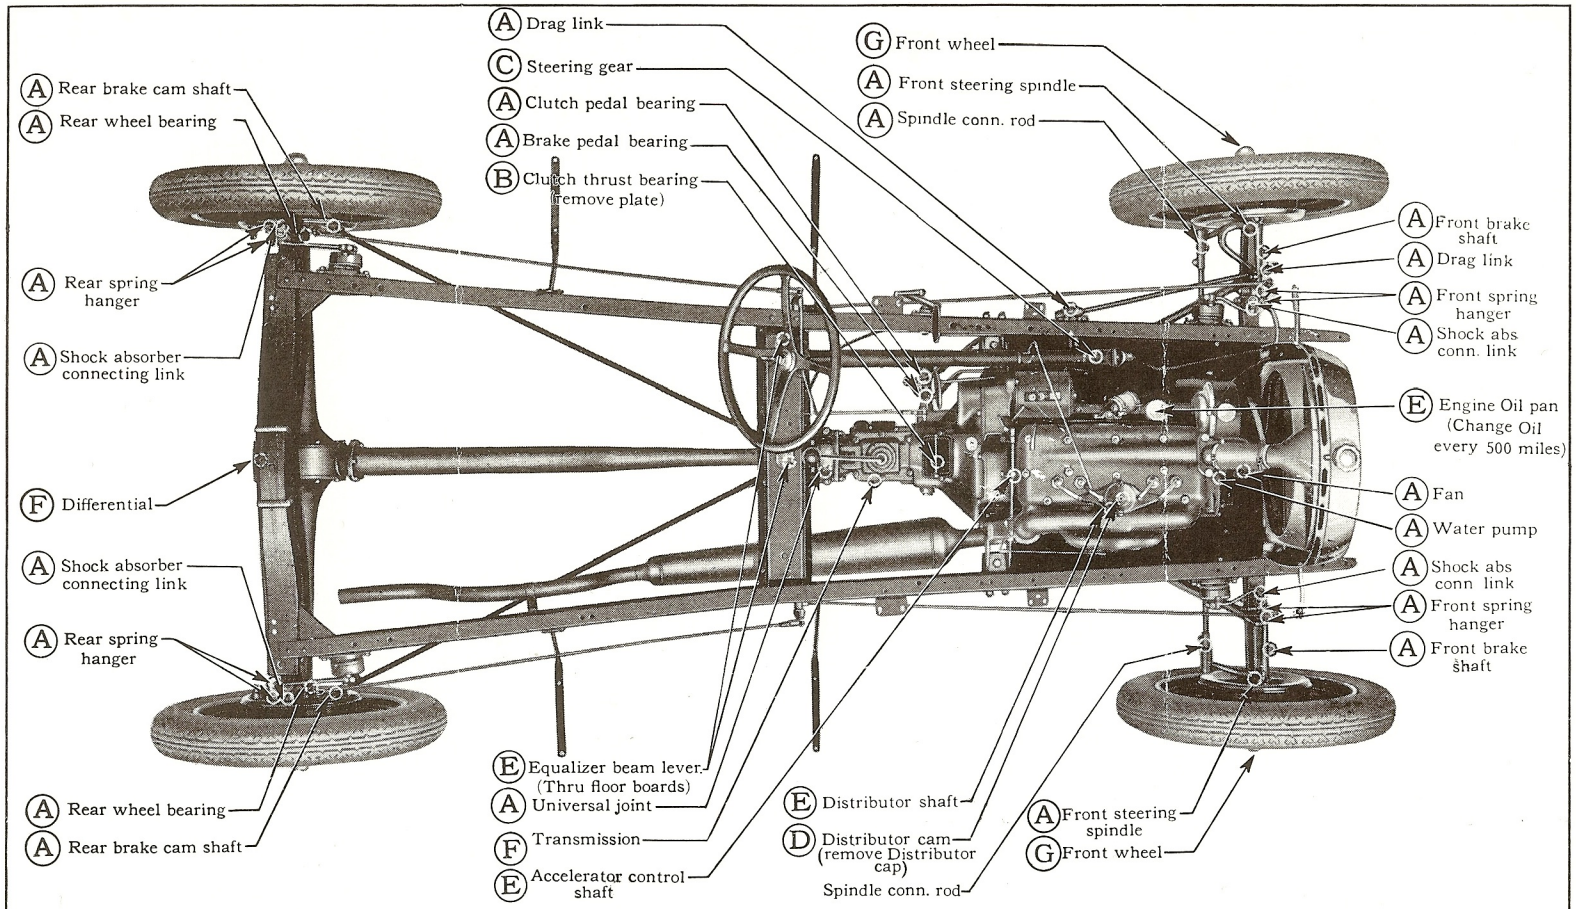

(A) Grease every 500 miles (pressure gun)
(B) Grease every 2000 miles (pressure gun)
(C) Ford Special steering gear lubricant every 2000 miles (Do not use grease)
(D) Clean and apply light film of vaseline every 2000 miles
(E) Oil every 500 miles
(F) Gear lubricant every 5000 miles
(G) Pack with grease—every 5000 miles

FIG. 445
Lubrication Chart